

## InSight<sup>®</sup> Back Onsert Removal/Replacement Instructions

InSight's seat and back cushions can be easily removed for cleaning, repair or replacement by following these simple steps.


### Tools Needed

- Plastic, tapered end stick (commonly used for auto windshield replacement)

### Back Onsert Removal



Starting at the top corner of the seat back, slide the tapered end stick between the onsert and the seat module and lift.

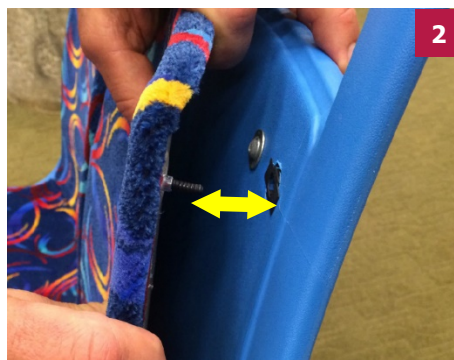

Then, pry up the back onsert to release the two serrated studs from the retainer assembly at each corner.



Next, pull the back onsert upward to remove the two spring clips from the slots in the seat module.

### Back Onsert Replacement



Insert the two bottom spring clips into the slots on the seat module.



Then, push down to engage the spring clips to the bottom of the slot. *The bottom edge of the back onsert should align with the back edge of the seat onsert.*



Firmly depress the two serrated studs into the clip assembly. Audible clicking will be heard once the studs enter the clip assembly. Push down until clicking stops.

**NOTE:** Check that all four corners of the onsert are firmly secured to the seat module. If any corner of the onsert is not secured, remove and replace the onsert. Be sure that the spring clips are fully seated behind and to the back of the slot in the module. If the serrated studs are not secure and have not made a clicking sound during assembly, check the condition of the retainer assembly. See Stud Retainer Assembly Instructions as required.