


InSight® Seat Onsert Removal/Replacement Instructions

InSight's seat and back cushions can be easily removed for cleaning, repair or replacement by following these simple steps.

Tools Needed

- Plastic, tapered end stick (commonly used for auto windshield replacement)

Seat Onsert Removal

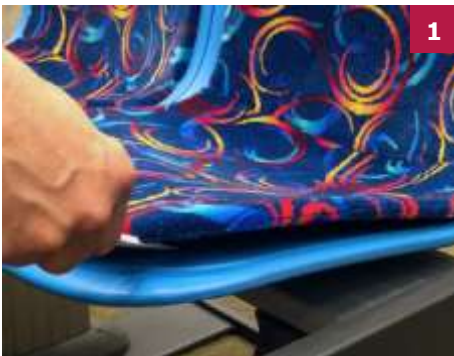

Starting at the front corners of the seat, slide the tapered end stick between the onsert and the seat module and lift.



Then, pry up the seat onsert to release the two serrated studs from the retainer assembly at each corner.




Next, pull the seat onsert forward to remove the two spring clips from the slots in the seat module.

Seat Onsert Replacement



Insert the two spring clips into the slots on the seat module.

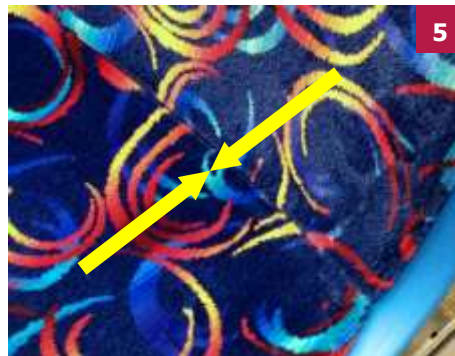

Then, carefully align the back edge of the seat onsert with the bottom of the back onsert.



Firmly depress the two serrated studs into the seat module. Audible clicking will be heard once the studs enter the retainer assembly. Push down until clicking stops.

NOTE: Check that all four corners of the onsert are firmly secured to the seat module. If any corner of the onsert is not secured, remove and replace the onsert. Be sure that the spring clips are fully seated behind and to the back of the slot in the module. If the serrated studs are not secure and have not made a clicking sound during assembly, check the condition of the retainer assembly. See Stud Retainer Assembly instructions as required.