


## Seat Module Installation Instructions

The *InSight*, *Insight-Prime* and *InSight-Prime+* seat modules can be removed and replaced per below.

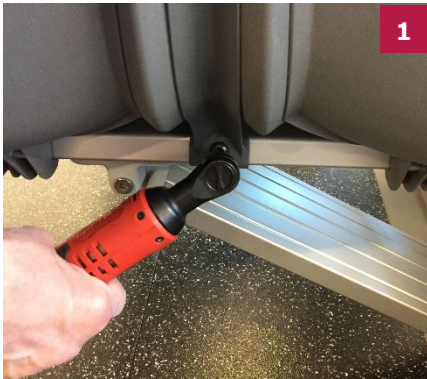

1 Remove the seat tie bolt from the back of the extrusion with a T30 TORX bit.



2 Push (bend-twist) the seat tie up and remove from between transverse seats.



3 Remove the two seat bolts from the front of the extrusion mount area.



4 The weight of the seat module will fall back, but removal is up, back and up.




5 Explanation: the seat module hooks over the back of the extrusion (see arrow).




6 Hook the new seat over the back of the extrusion and rotate forward and down.




7 Align mount and extrusion nutsert holes, picture shows slight misalignment.

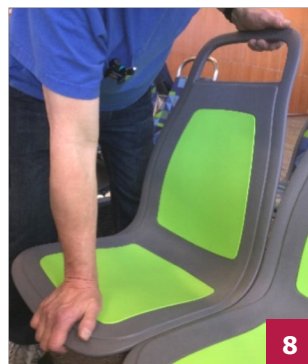

8 Pull the grab handle forward and push down on the front edge of the seat.

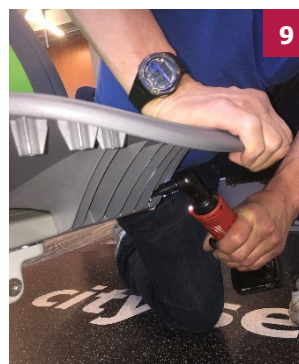

9 Maintain downward pressure on the front of the seat and tighten the bolts

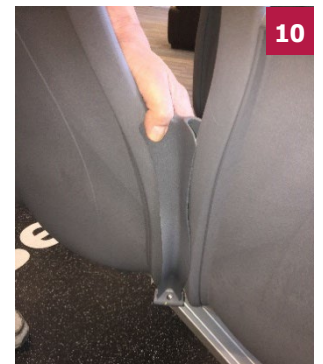

10 Replace the seat tie by sliding down and into position and replace bolt.