

Vision-NU (Non-Upholstered) Back Onsert - Removal/Replacement Instructions

Vision's seat and back onserts can be easily removed for cleaning, repair or replacement by following these simple steps.

Tools Needed

- Non-scratching pry tool




Back Onsert Removal



Starting at the upper side edges of the seat back, slide a pry tool between the onsert and the seat frame and rotate.



Then, pry away the back onsert to release two spring clips from the square opening at each corner. Reference image only, the back onsert will still be close to frame (3).

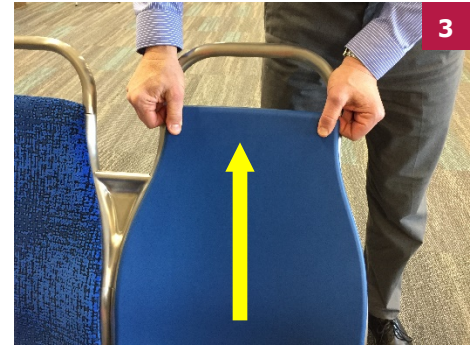

Next, lift the back onsert up to disengage the mid-section spring clips behind cross member strap of the seat module. This a little tricky as the clips are under tension.

Back Onsert Replacement



Replace the back before the seat. Bring the back close to the final location but start about 1 - 2 inches high so the middle spring clips are above the strap (see 5).



Both spring clips must engage behind the middle cross member strap. Per image 4, push in at the middle and down at the top to engage the clips behind the strap.



After the middle clips are engaged, align the square clips to the square openings (see 2) and tap the onsert from the front to insert the clips into openings.

NOTE: Check that all four corners of the onsert are firmly secured to the seat module. If any corner of the onsert is not secured, remove and replace the onsert. Be sure that the washer heads are fully seated behind and to the narrow end of the keyways in the module. If the serrated studs are not secure and have not made a clicking sound during assembly, check the condition of the retainer assembly. See Stud Retainer Assembly instructions as required.