

Vision-NU (Non-Upholstered) Seat Onsert - Removal/Replacement Instructions

Vision's seat and back onserts can be easily removed for cleaning, repair or replacement by following these simple steps.

Tools Needed

- Non-scratching pry tool



Seat Onsert Removal



Starting at the front side edges of the seat cushion onsert, slide a pry tool between the onsert and the seat frame and rotate.



Then, pry away the seat cushion onsert to release two serrated studs from the retainer assembly at each corner.



Pull the onsert forward to disengage the two washer heads from the smaller opening of the keyway slots in the seat module, then pull the seat onsert upward to remove out of the larger opening.

Seat Onsert Replacement



Insert the two washer heads into the larger openings of the keyways on the seat module.



Push rearward to engage the washer heads to the back (smaller opening) of the keyways, be sure that the back lip of the seat tucks under the bottom of the back.



Next, firmly depress the two serrated studs into the retainer assemblies of the seat module. Audible clicking will be heard, push down until clicking stops.

NOTE: Check that all four corners of the onsert are firmly secured to the seat module. If any corner of the onsert is not secured, remove and replace the onsert. Be sure that the washer heads are fully seated behind and to the narrow end of the keyways in the module. If the serrated studs are not secure and have not made a clicking sound during assembly, check the condition of the retainer assembly. See Stud Retainer Assembly instructions as required.