

Vision[®] Back Onsert with Upholstery - Removal/Replacement Instructions

Vision's seat and back onserts can be easily removed for cleaning, repair or replacement by following these simple steps.

Tools Needed


- Non-scratching pry tool



Back Onsert Removal



Starting at the upper side edges of the seat back, slide a pry tool between the onsert and the seat frame and rotate.

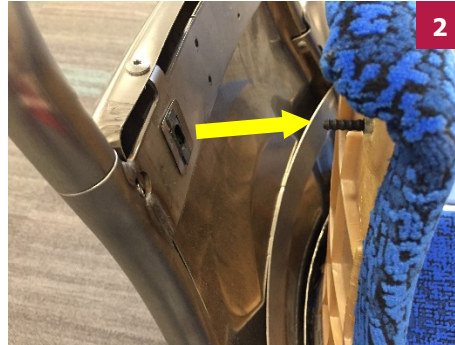

Then, pry away the back onsert to release two serrated studs from the retainer assembly at each corner.



Next, lift the back onsert up to disengage the bottom two washer head bolts from the keyways on the seat module.

Back Onsert Replacement



First, insert the bottom two washer heads into the larger openings of the keyways on the seat module.



Then, push down to engage the washer heads into the smaller openings of the keyways.



Next, firmly depress the two serrated studs into the retainer assemblies of the seat module. Audible clicking will be heard, push down until clicking stops.

NOTE: Check that all four corners of the onsert are firmly secured to the seat module. If any corner of the onsert is not secured, remove and replace the onsert. Be sure that the washer heads are fully seated behind and to the narrow end of the keyways in the module. If the serrated studs are not secure and have not made a clicking sound during assembly, check the condition of the retainer assembly. See Stud Retainer Assembly instructions as required.