

InSight[®] Stud Retainer Assembly Repair

The following information is provided to help you replace the seat and back onsert stud retainer assembly.

Tools Needed

- Special 11SP Vice-Grip[®] clamp (AmSeCo part number: 155769000)

Retainer Assembly



1

Remove broken or malfunctioning stud retainer assembly.



2

Position bottom of stud retainer assembly in the opening and under the seat. (AmSeCo part number: 114880000)




3

Hold in place with clamp bottom (1 x 1" square tube section).



4

Position top of stud retainer assembly. (AmSeCo part number: 114879000)

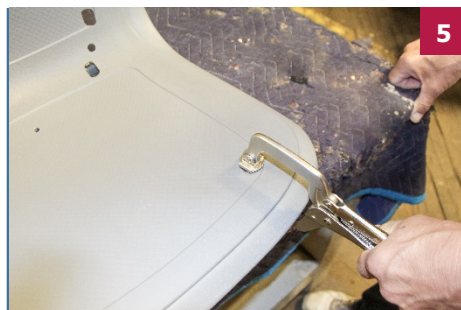

5

Firmly clamp together to secure. There should be an audible click when properly secured.



6

Finished